

# DOORBELL OR CHIME TROUBLESHOOTING CHART

Problem	Possible Cause	Solution
Bell or chime does not ring	1. Defective button.	1. Test by removing button and touching wires together. If bell rings, button is defective; replace button.
	2. Defective bell or chimes.	2. Detach wires from bell or chimes and connect them to a test bell or light. If bell rings or bulb lights when doorbell button is depressed, bell is defective; replace bell.
	3. Defective transformer.	3. Connect test bell to transformer and press door button. If bell does not ring, transformer is defective; replace transformer.
	4. Loose connection or break in circuit.	4. Trace and check all wiring; tighten loose connections or replace damaged wiring.
	5. No power at transformer.	5. Check to see that circuit is turned on; check for loose connection at transformer primary. If transformer is defective, replace.