

# TROUBLESHOOTING FOOD BLENDERS

Problem	Solution
Doesn't work at all	1. Refer to Troubleshooting Chart on page 205.
	2. Check motor fuse. If blown, replace.
Runs intermittently	1. Check wire connections. If faulty, repair.
	2. Check motor. If faulty, replace.
Doesn't run at some speeds	1. Check multispeed switch. If faulty, clean or replace switch.
	2. Check wire connections. If faulty, repair.
Motor runs, but blade doesn't turn	1. Check drive stud. If loose, tighten. If damaged, replace.
	2. Check blade. If dirty, clean and lubricate. If damaged, repair or replace.
Jar leaks	1. Check base. If loose, tighten base into jar.
	2. Check seal. If damaged, replace seal, blade assembly, or jar.